



# DIGITAL CAP OPERATOR'S MANUAL



## **Mega Electronics Limited.**

Mega House, Grip Industrial Estate  
Linton, Cambridge, CB21 4XN

Tel: +44 (0) 1223 893900 Fax: +44 (0) 1223 893894  
Email: [sales@megauk.com](mailto:sales@megauk.com) Web: [www.megauk.com](http://www.megauk.com)

# Safety Instructions

WHEN USING YOUR HEAT PRESS,  
BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED,  
INCLUDING THE FOLLOWING:

1. Read all instructions.
2. Use heat press only for its intended use.
3. To reduce the risk of electric shock, do not immerse the heat press in water or other liquids.
4. Never pull cord to disconnect from outlet, instead grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces, allow heat press to cool completely before storing.
6. Do not operate heat press with a damaged cord, or if the equipment has been dropped or damaged. To reduce the risk of electric shock, do not disassemble or attempt to repair the heat press, take it to a qualified service person for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the equipment is used.
7. Close supervision is necessary for any heat press being used by or near children. Do not leave equipment unattended while connected.
8. Burns can occur when touching hot metal parts.
9. To reduce the likelihood of circuit overload, do not operate other high voltage equipment on the same circuit.
10. If an extension cord is necessary, then a 20 amperage rated cord should be used. Cords rated for less amperage may overheat, care should be taken to arrange the cord so that it cannot be pulled or tripped over.

**SAVE THESE INSTRUCTIONS**


# Table of Contents

---


Safety Instructions	2
Machine View	4
Control Panel	5
Operating Instructions	6 - 10
Connecting the System	6
Turning the System On	7
Adjusting the Time & Temperature	8
Adjusting the Pressure	9
Printing and Pressing	10
Electrical Schematic	11

# Machine View


## SIDE VIEW

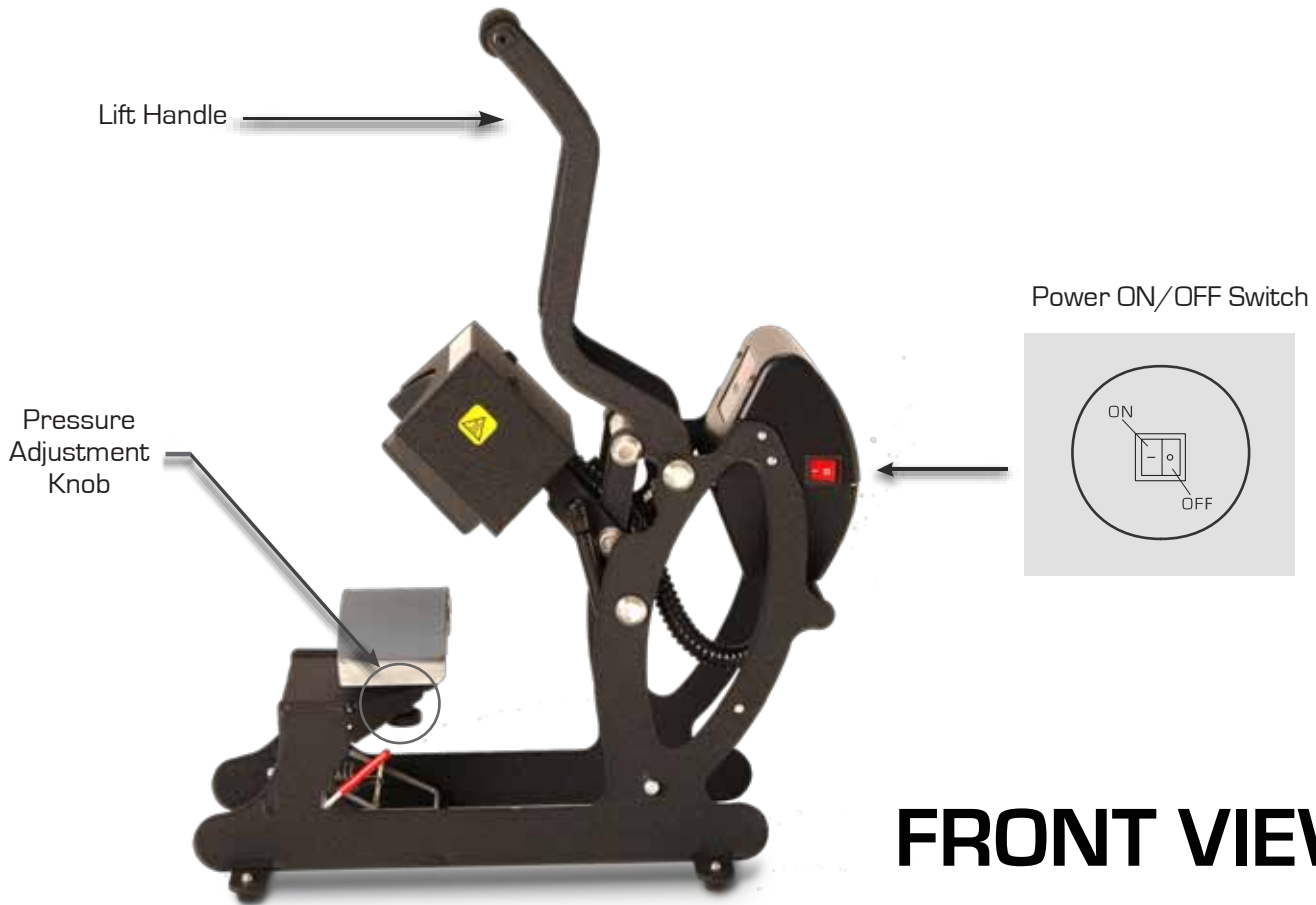

## FRONT VIEW

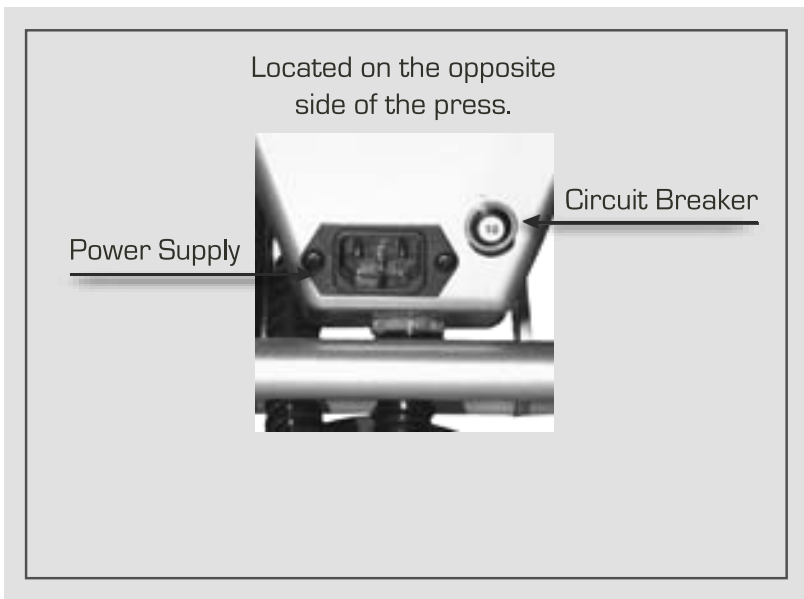

# Control Panel Guide

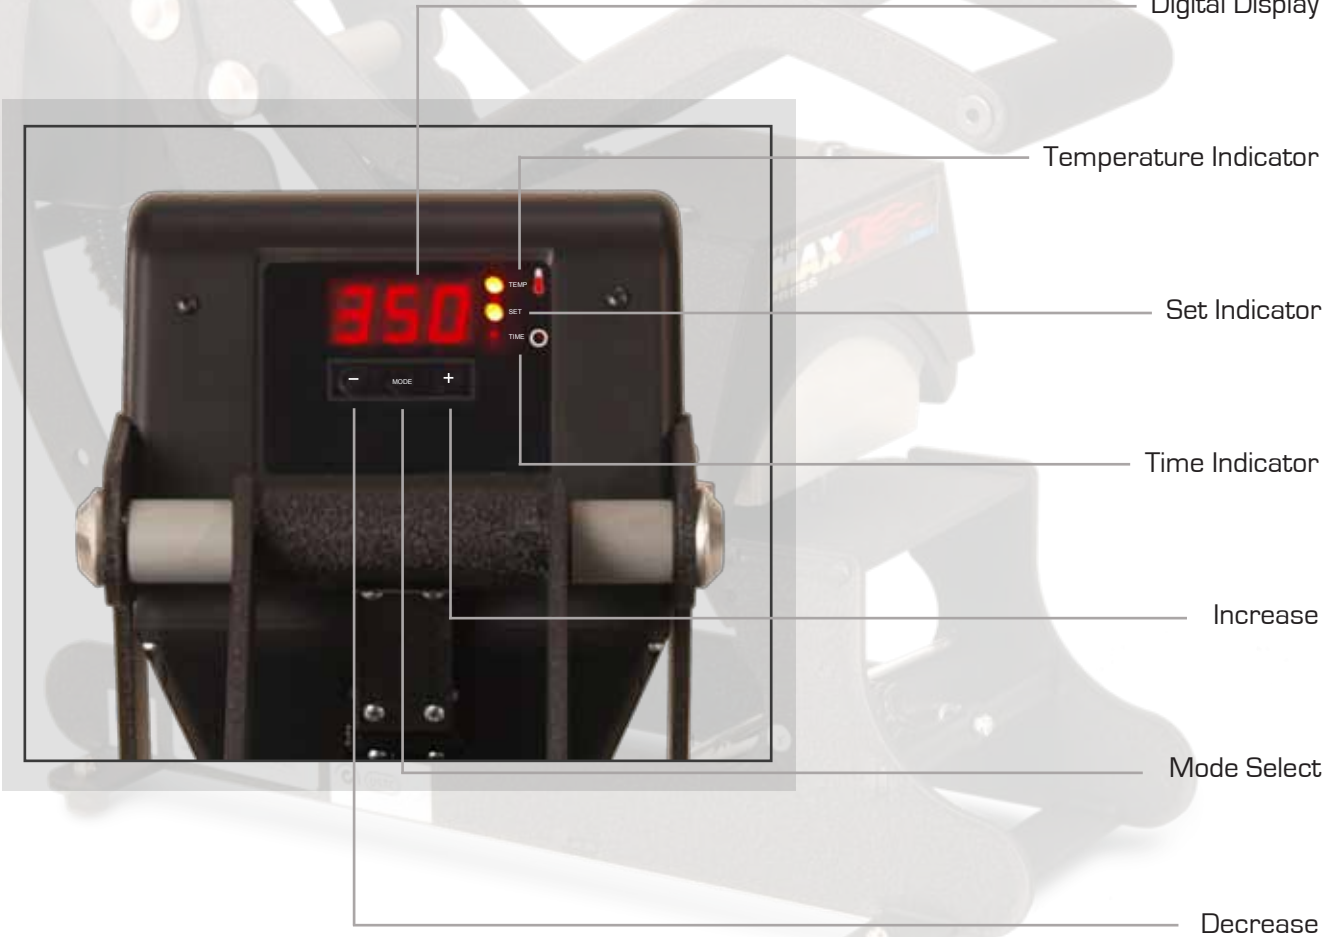

# Operating Instructions



- To avoid burns, do not touch the heated platen during use.
- Keep hands clear of the upper platen of the press during platen lock down as the pressure may cause injury.
- Press should be placed on a sturdy, suitable stand at least 36"L x 24"W x 29"H.
- Work area must be kept clean, tidy and free of obstructions.
- Power supply cord must be disconnected before cleaning or servicing press.

## Connecting the System

Connect the Power cord into the proper grounded outlet with sufficient amperage rating

### Voltage

120 Volt – The Digital Cap Press requires a full 20amp grounded circuit for 120 Volt operation.

240 Volt – The Digital Cap Press requires a full 10amp grounded circuit for 240 Volt operation.

**Extension Cords** – If used they should be as short as possible and not less than 12 gauge – Heavy Duty cords are recommended.

**Circuits** that have less than 10amps or that have other high demand equipment or heat press plugged in should not be used.

NOTE: if the supply cord is damaged it must be replaced by a qualified person to avoid a hazard

### CAUTION:

Failure to follow these instructions will cause

- 1 Erratic controller functions
- 2 Inaccurate displays and slow heat up
- 3 The circuit breaker to disengage

# Turning the System On

**2. SWITCH THE SYSTEM ON:** See the diagram below for switch placement.

- Locate the lift handle and position the heat platen in the “UP” (load) position.
- Now, locate the Power ON/OFF Switch on the side of the press, then turn the Power Switch on.




# Adjusting the Time & Temperature

## 3. ADJUST THE TEMPERATURE

- Locate the LED Display on the Press.
- Press the Mode Select button located in the center of the Control Panel. The (SET) and (TEMP) lights located next to the display will illuminate indicating you are in the adjust temperature mode.
- Next, press the (-) button located to the left of the Mode Select button to lower the temperature setting, or press the (+) button located to the right of the Mode Select button to raise the temperature setting. The temperature can be set from 205° F (96° C) to 430° F (221° C).

The LED will display changes as you make them.

NOTE: The temperature indicator will only display temperatures 200°F (93°C) and up.

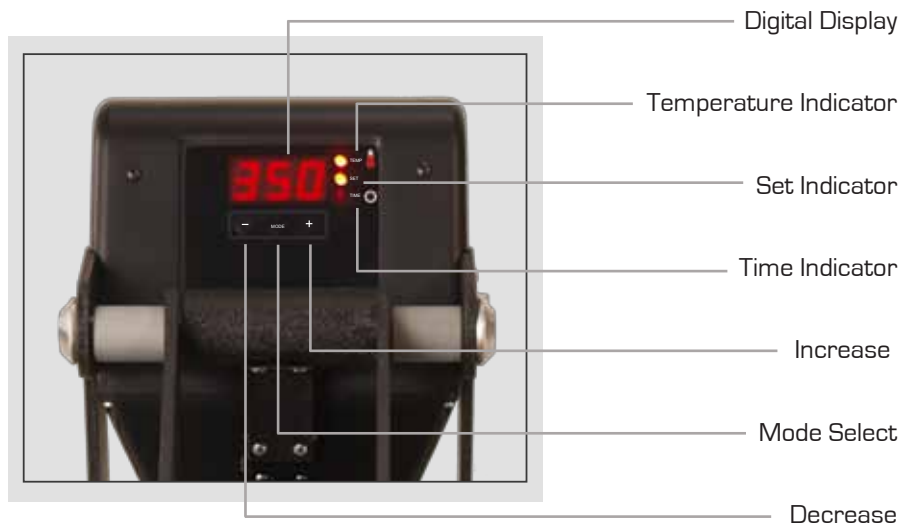

## 4. ADJUST THE TIME

- Once you have adjusted the temperature, press the Mode Select button again. This will advance you to the Time mode. The set and time lights will illuminate, indicating that you are in the Time mode.
- Adjust the time in the same manner that you adjusted the temperature. Select the desired time and push the Mode Select button again to exit the time settings. All lights will be off and the press will return to the Print Mode.



# Adjusting the Pressure

## 5. ADJUST THE PRESSURE

The Pressure Adjustment Knob is located directly under the lower platen.

- Adjust the pressure by turning the knob clockwise to increase pressure and counter clockwise to decrease pressure.



REMEMBER: To allow for the thickness of your cap when adjusting the pressure.

WARNING: STRUCTURAL DAMAGE CAUSED BY EXCESSIVE PRESSURE IS NOT COVERED UNDER THE LIMITED WARRANTY!

# Printing / Pressing

## 6. PRINT / PRESS

Once your equipment has reached the designated temperature:

- Pull the “Cap Hold Down Lever” up and towards the operator and load the cap onto the lower platen.
- Pull out the sweatband and position the cap so that it clears the upper platen when the machine is closed.
- Push the “Cap Hold Down Lever” down and away from the operator. This will stretch the cap and keep it from shifting.
- Position your application and lower and lock the heat platen into the press position. This will start the automatic timing process.



The timer will automatically count down and audibly signal you to lift the heat platen into the “UP” position when the press cycle is complete.

The time will automatically re-set and you are ready to continue with the next application.

# Electrical Schematic

